

12-in-ONE Multi-tasking Garment Steamer

1 2 合 1 多 功 能 衝 射 式 蒸 熨 機



INSTRUCTION BOOKLET 使用說明

CONAIR®
CGS28HWH

美康雅12合1多功能衝射式蒸熨機

重要安全指示
當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

使用前請細閱使用說明
電器應遠離水源

安全預防措施
警告：請小心包裝或產品上使用的塑膠袋，請擺放在遠離兒童的位置。
請不要在嬰兒床、睡床、嬰兒車或兒童玩耍區內使用，因為塑膠袋的薄層有可能會堵塞鼻子及口腔，阻礙呼吸。此塑膠袋不是玩具，敬請注意。

警告：不要在盛水的浴缸、淋浴、洗臉盆或其它器皿附近使用本器具。

- 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安裝不超過30毫安培(mA)的漏電斷路器(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其他液體中。
- 如果電源軟線損壞，為了避免危險，必須由制造商、其維修部或類似部門的專業人員更換。
- 若電器曾跌落或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或注水和清潔前請先拔去插頭。
- 本產品不該讓有智障、殘障、感官有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。小孩子應受監督以保證他們不會把玩此產品。
- 待電器冷卻之後才收藏。
- 為避免損壞電源軟線，收藏時切勿將電源軟線纏繞在電器上並確保其不被拉扯、扭曲或壓折。
- 若蒸氣出口太接近皮膚、頭皮或眼睛，或不恰當使用此電器，噴出的蒸氣或會造成灼傷。為了減少接觸蒸氣噴出的熱水的危險，請在每次使用前以遠離人體的方式檢查電器。
- 切勿蒸熨正穿在身上的衣物。
- 蒸氣出口應置於水缸以上位置。
- 接觸發熱的金屬部份、熱水或蒸氣或會引致燙傷。將電器倒轉時請小心，因可能有熱水在水缸內。
- 若注水方法不正確，請勿開動此電器，需用潔淨冷水來添加在水缸中，在硬水質的地區推薦用蒸餾水。
- 不建議接駁伸延線使用，但若有此必要，請使用13安培伸延線。若使用低安培的伸延線有可能引致過熱。請小心處理伸延線，以防絆倒他人。

警告
1. 切勿讓任何東西跌入或放入開口或管道中。
2. 當蒸熨配件發熱或已插上電源，切勿將蒸熨配件直接放在任何表面或電源軟線上。

美康雅12合1多功能衝射式蒸熨機

- 當放出蒸氣時，如太靠近人體或不正當使用這個裝置可能會造成燙傷，請把蒸氣出口盡量遠離自己，並測試裝置。
- 啟動電器前，蒸氣喉管必須盡量伸直並掛在托架掛鉤上。
- 切勿猛力拉扯電源軟線，應抓住插頭部份拔去電源。
- 接觸發熱的金屬部份、熱水或蒸氣或會引致燙傷。將電器倒轉時請小心，因可能有熱水在水缸內。
- 提蒸熨機時請小心，因內有熱水。

警告：使用時蒸氣喉管會發熱。請避免長期接觸。

請保留此安全指示
此電器只適合家居使用

拆除包裝指示
將包裝盒放在寬大且穩固的平面上。小心從包裝箱拆除包裝物料。請將塑膠袋放於遠離兒童的位置。

裝配挂燙機支架
第一步：裝配蒸熨機支架



 
- 把粗的一邊支架桿插入底座容器中（圖a）



- 旋轉膠接頭並確保連接牢固（圖b）



- 打開高度調校固定夾，把桿盡量拉伸（圖c）

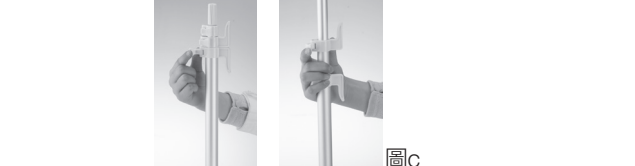

美康雅12合1多功能衝射式蒸熨機

- 鎖好固定夾（圖d）



第二步：裝配蒸氣喉管

安裝方法
1.對準箭頭2.插入蒸氣喉3.順時針旋轉接頭，直至喉管箭頭對準“鎖緊”箭頭



旋轉蒸氣喉管（確保已經鎖緊）
拆卸方法：
1.逆時針旋轉喉管，直至喉管箭頭對準“鬆開”
2.向上拔起即可



使用硅膠刷（配合T型噴嘴使用）

- 該附件適用於棉質、滌綸和尼龍等面料。
- 要裝上硅膠刷至T型噴嘴上，首先請確保電器已開機及T型噴嘴已冷卻。硅膠刷底部的凸出扣位對準T型噴嘴上對應的凹槽，並將硅膠刷上方推往T型噴嘴，直至上方的橫栓緊扣於T型噴嘴上。
- 按T型噴嘴的使用方法來使用此配件，當從衣料上方開始蒸熨至下方，請確保硅膠刷接觸衣料表面。
- 使用後，關掉蒸氣熨斗並待配件冷卻。然後取下硅膠刷，按下硅膠刷上方的橫栓的底部，當橫栓已分離將其往上推並從T型噴嘴上拆除。然後掃除硅膠刷所收集的微塵纖維。



使用硬刷及植毛刷（配合T型噴嘴使用）

- 該附件適用於棉質、羊毛等面料。
- 使用方法如硅膠刷。




使用布套（配合T型噴嘴使用）

- 該附件適合清潔硬物表面。
- 需把布套套在T型噴嘴上使用。




使用集中蒸氣噴嘴

- 此配件適合集中蒸氣熨直頑固的皺紋。
- 只需將蒸氣出口直接對準需要熨直的地方。（小心別將蒸氣噴向任何身體部份）

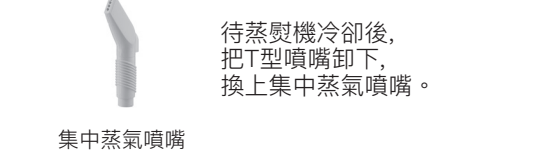

使用直熨夾噴嘴

- 此配件適合熨出西褲及恤衫袖口的畢挺折痕，及一般熨直。
- 首先，選出合適的折線並用手拉緊折線。按下直熨夾的手柄以打開直熨夾，並移到折線被拉緊的位置附近，小心保持雙手遠離配件及蒸氣。將折線上方部份放在直熨夾中間。放鬆手柄，夾穩並沿折線以遠離自己的方向下拉。最後按下手柄打開直熨夾並移離衣料。

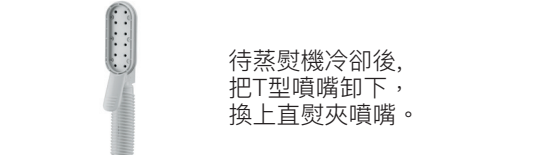

使用V型噴嘴

- 此配件適合去除大件衣物異味。
- 只需將衣物掛於衣架上，讓蒸氣向上慢慢滲透衣物，令衣物氣味清新。



附件	棉	羊毛	滌綸	尼龍	硬物表面 例如玻璃窗
硬刷及植毛刷	✓	✓	✓	✓	✓
布套	✓	✓	✓	✓	✓
集中蒸氣噴嘴	✓	✓	✓	✓	✓
直熨夾噴嘴	✓	✓	✓	✓	✓
V型噴嘴	✓	✓	✓	✓	✓

 
使用指示

注水前
將水缸倒轉，檢查水缸底部的蓋子上的活門及彈簧能否運作。並確保水缸能穩固地放置在機身儲水格上，若水缸內有水，請倒去水並清潔水缸。請依指示保養及清潔電器。

注水入水缸（在插上電源前）
拉出水缸，將水缸倒轉，擰開水缸底部中心的活塞，將水缸放在水喉下注水至適當水位，切勿外瀉，再將活塞裝回水缸並擰緊，再將水缸倒轉。將水缸穩固地放置在機身儲水格。

切勿注熱水入水缸

認識您的蒸熨機

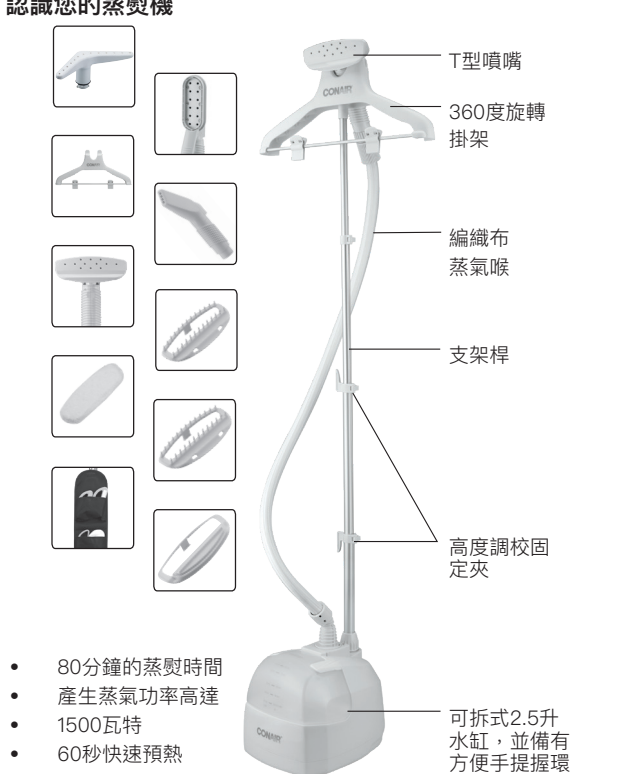

使用蒸熨機

- 請確保喉管連接穩固。
- 確保支架桿已伸到最長位置，及喉管並無扭曲。
- 將電源軟線插上電源。
- 旋鈕開關到“I”或“II”而選擇高或低的蒸氣速度。
- 開/關鍵亮燈以顯示已開機。
- 約一分鐘後蒸氣便會噴出。
- 注意：使用時蒸氣喉管會發熱，避免長期接觸之。
- 如水缸裏的水用完，機器將自動關閉，指示燈也將熄滅。
- 如使用完畢，可關閉開關，否則再注水工作。

清潔及收存指示

- 將開/關鍵撥到“O”(關)位置並拔去插頭。
- 等約30分鐘待電器完全冷卻。
- 拔去電源軟線並纏繞在儲存掛勾上收藏。
- 拔去蒸氣喉。
- 拆去水缸，擰開活塞，倒去剩餘的水，讓水缸風乾。
- 拔出排水蓋，排除出機身儲水格內的水。
- 裝回水缸。
- 收藏電器。



清除水垢指示

若此電器噴出蒸氣的速度開始減慢，或蒸氣間歇地停止噴出，您需要清除水垢。水垢是金屬機件上日積月累的鈣化物質。為保持美康雅直立式蒸熨機的最佳運作，請經常清除水垢，清除水垢的頻繁程度視乎水的硬度及使用頻率而定。如使用純淨水，可減少水垢的產生及清除的頻率。

要清除水垢，混和三份一白醋及三份二清水並注入水缸。插上電源，旋轉開/關鍵到“II”並待一半的水醋混合物蒸發掉，旋轉開/關鍵到“O”(關)，拔去電源，待其冷卻30分鐘。



在底座上拔出排水蓋，並把裝置置於可排水處，裝好水箱

後，水將從排水孔中排出，並帶出水垢。最後，蓋回排水蓋。

重復以上步驟，通常2—3次，直至噴出蒸氣的速度回復正常。每次請用新混和的水醋混合物。清除水垢後，用冷水重復以上步驟一次後，才蒸熨衣物。

蒸熨衣物指示

握T型噴嘴，蒸氣出口盡量遠離自己。由衣物底部開始蒸熨，讓蒸氣於衣物內及外側徐徐上升，以熨直皺紋。慢慢由衣物下至上移動噴嘴；然後移開噴嘴，用手輕力拉直衣物便可。有些衣料可能較適合在內側蒸熨，這可讓衣料纖維鬆弛，以移除皺紋。請依照由下至上方向蒸熨。切勿橫熨或向各個方向蒸熨。

強力蒸氣噴射

對於比較困難的布料，只需按下T型噴嘴上的蒸氣按鈕，就能發揮特強蒸氣噴射效果

注意：先在衣料上不顯眼的部份測試會否引致褪色。將布料、毛巾、手帕掛在支架桿上或毛巾架上。較厚重的布料或需要多次蒸熨。需要時請重復蒸熨。多次使用後，您會更快更有效率，並掌握各種衣料的蒸熨技巧及時間。

蒸氣出口切勿直接接觸絲絨或真絲物料。

請常舉高蒸氣喉，以令喉管內凝結的水流回機身若蒸熨低水平位置的衣料，凝結的水會積在喉內。這會引致喉管內發出汩汩聲，及水滴凝聚在T型噴嘴上的蒸氣孔附近。要避免此情況，請經常提高噴嘴，以盡量伸延蒸氣喉管。

蒸熨窗簾指示

根據窗簾資料洗滌及晾乾窗簾後，掛回窗簾並蒸熨窗簾。

蒸熨機日常問題與解決方法

問題	原因	解決方法
蒸熨機不發熱	並未插上電源	插上電源
無蒸氣噴出	水缸內水位低	撥開/關鍵到“O”(關)位置，並注入清水
蒸氣出口滴水	蒸氣凝結於蒸氣喉內	向上提起蒸氣喉以讓水流回機身
蒸氣出口發出汩汩聲	蒸氣凝結於蒸氣喉內	向上提起蒸氣喉以讓水流回機身
蒸氣不流暢地噴出	水垢積聚於水缸內	清除水垢

注意：不同地區的水所含的礦物成份不同，為確保蒸熨機的持續正常操作，收藏前請把水缸清洗乾淨及倒去剩餘的水。

電線系統

總電線的顏色根據其性質而定：
綠或綠黃色代表地線
藍色代表中線
啡色代表火線
由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故若要拆除插頭必須依照以下重新裝配操作說明：

- 藍色的電線應和電路接頭“N”或黑色標示接頭接駁。
 - 啡色的電線應和電路接頭“L”或紅色標示接頭接駁。
 - 綠或黃色的電線應和電路接頭“E”或“PE”或綠或綠黃色標示接頭接駁。
 - 切勿將藍色或啡色的電線駁在電路接頭的地線“E”或綠或綠黃色標示接頭上。
 - 此電器已接駁地線。
- 此電器使用十三安培電插頭時，請採用十三安培的保險絲。若使用其他電插頭，請採用十安培保險絲。

一年保養限期

在您購買日期起一年內，在正常使用的情况下，如產品的品質或零件有任何問題，美康雅顧客服務中心將會為您免費提供維修或換貨服務。

注意：此項保修不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改進的產品，美康雅公司有權在不預先通知的情況下更改條款和說明書。如需獲得此保修服務，請保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地區的美康雅顧客服務中心處理。

保修期之後

請致電使用說明書中所列出您所在地區的美康雅顧客服務中心，詢問維修服務詳情，或是電郵至email_asia@conair.com，附上您的名字，電話號碼和電郵地址，及說明產品問題的詳細情況。

美康雅顧客服務中心
香港九龍觀塘觀塘道388號創紀之城渣打中心35樓
顧客服務熱線：(852) 2751 4604
電郵：email_asia@conair.com
網址：www.hkconair.com

CONTINENTAL CONAIR LIMITED
CHINA CREATIVE DEPARTMENT

Date	01/11/2022
Customer	CFEL+HK
Model No.	CGS28HWH
Description	IB
Job No.	
Reference No.	IB-11/404B
Revision No.	0
Color	1C+1C(Black)
Open Size	828mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Phoebe Laung
Vendor	MILLPLAN
Supplier	

折疊方法
Folding method:
18 pages (9x 2)



CONAIR 12-in-ONE
Multi-tasking Garment Steamer

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

- WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.
Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.
- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before filling and cleaning it.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
- Do not steam garments while on a person.
- Always keep the hose and nozzle elevated above the water container.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.

- Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. In hard water areas, we recommend the use of distilled water.
- Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere-rated cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

CAUTION

- Never drop or insert any object into any opening or hose.
- Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.
- While emitting steam, this appliance may cause burns if it is used too close to the skin, scale or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from steam vents, test appliance before use by holding it away from body.
- Before unit is turned on the hose must be extended, and place it in the hook.
- Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn a steam appliance upside down - there may be hot water in reservoir.
- Use with caution when carrying steamer as it contains hot water.

Caution: Hose will be hot when in use. Avoid prolonged contact.

KEEP THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

UNPACKING INSTRUCTIONS

Place the box on a large sturdy flat surface. Carefully remove the appliance from the packing material. Keep all plastic bags away from children.

STEAMER ASSEMBLY

STEP 1 – Assembling the Support Rod



 
- Insert pole with bigger diameter side into receptacle i base (fig a)



- Slide plastic connector onto it and fix the connector tightly (fig b)



- Open the locking tab and pull out the telescope pole totally (fig c)

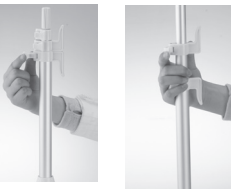

- Lock up the tab (fig d)



- Slide hook into the top of the pole (fig e)



STEP 2 – Attaching the steamer Hose

Assembly process:
1. Align to unlock arrow 2. Press 3. Turn clockwise till align to lock arrow

Removing the Steamer Hose (make sure unit has been cooled)



Disassembly process:

- Turn counterclockwise till align to unlock arrow 2. Pull



USING THE SILICON BRUSH ATTACHMENT (USED IN CONJUNCTION WITH STEAM ATTACHMENT)

- This attachment is ideal for ultimate pressing performance, e.g. cotton, polyester and nylon etc.

- To attach the Silicon brush attachment to the T-nozzle, first ensure that the appliance is "O" and the T-nozzle is cool. Position the lugs on the bottom of the Silicon brush attachment over the corresponding grooves on the base of the T-nozzle. Then push the upper part of the Silicon brush attachment towards the T-nozzle till the latch on the top of the attachment clicks into place.
- Use it in the same manner as the T-nozzle but begin at the top of the garment and move downwards to ensure that the attachment head touches the surface of the fabric.
- After use, switch the appliance "O" and wait for the T-nozzle to cool. Then remove the Silicon brush attachment from the T-nozzle by pressing the base of the latch on top of the Silicon brush attachment. Push upwards until the latch becomes dislodged and remove from the T-nozzle. Brush away any lint that may have gathered on the attachment head.



Position and push the lugs on the bottom of the silicon brush attachment towards the T-nozzle till clicks into place

USING THE BRISTLE BRUSH AND RIGID COMB BRUSH (USED IN CONJUNCTION WITH STEAM ATTACHMENT)

- This attachment is ideal for ultimate pressing performance, e.g. cotton, Wool etc..
- Use it in the same manner as the Silicon brush attachment.



Bristle brush and rigid comb brush the lugs on the bottom of the silicon brush attachment towards the T-nozzle till clicks into place



Cotton cover attachment To attach the cotton cover to the T-nozzle

USING THE CONCENTRATOR NOZZLE

- Use this attachment for more focused steaming to remove stubborn creases.
- Simply aim the steam jets on the nozzle directly at the area to be steamed. (Take care not to jet steam at any part of your body)



When the steamer cool down, take the T shape nozzle off and put the concentrator nozzle on.

Concentrator nozzle

USING THE PRESSING NOZZLE

- Use this attachment for creating creases in trousers and shirt sleeves and for general smoothing.
- Firstly, determine the desired crease line and hold the crease taut with one hand. Press the lever on the attachment handle to open the plate and clamp and place it over the crease close to where it is being held taut, being careful to keep your hand away from the attachment head and steam. Place the top of the crease in between the plate and clamp of the attachment. Release the lever to hold the attachment in place and carefully move the attachment along the crease and away from yourself. Press the lever on the handle to open the attachment and remove from the garment.



Pressing nozzle

USING V SHAPE NOZZLE

- Use this attachment for refreshing clothes.
- Putting the clothes on the hanger and let the steam up.



When the steamer cool down, take the hose off and put the V shape nozzle on.

Attachment							
Fabric/ Material							
Cotton	✓	✓	✓		✓	✓	✓
Wool	✓	✓			✓	✓	✓
Polyester			✓		✓	✓	✓
Nylon				✓	✓	✓	✓
Hard surface e.g.glass window				✓			

OPERATING INSTRUCTIONS

BEFORE FILLING THE WATER CONTAINER

Turn the water container upside down and inspect to make sure the valve and spring assembly are functioning. Place the container in the reservoir and check that it is seated securely. If the container has been stored with water inside, it may be necessary to remove the water and clean the container. Follow the steps for care and cleaning.

 
FILLING THE WATER CONTAINER (PRIOR TO PLUGGING IN THE APPLIANCE)

Remove the water container with the handle and turn upside down. Unscrew the valve in the center of the base. Fill container by holding container under a source of running cold water until the container is filled to the desired level. Do not overfill. Screw the valve cap onto the water container and

return the container to the upright position. Place the water container onto the base and make certain it is seated properly in the cavity.

DO NOT FILL THE CONTAINER WITH HOT WATER

GETTING TO KNOW YOUR STEAMER

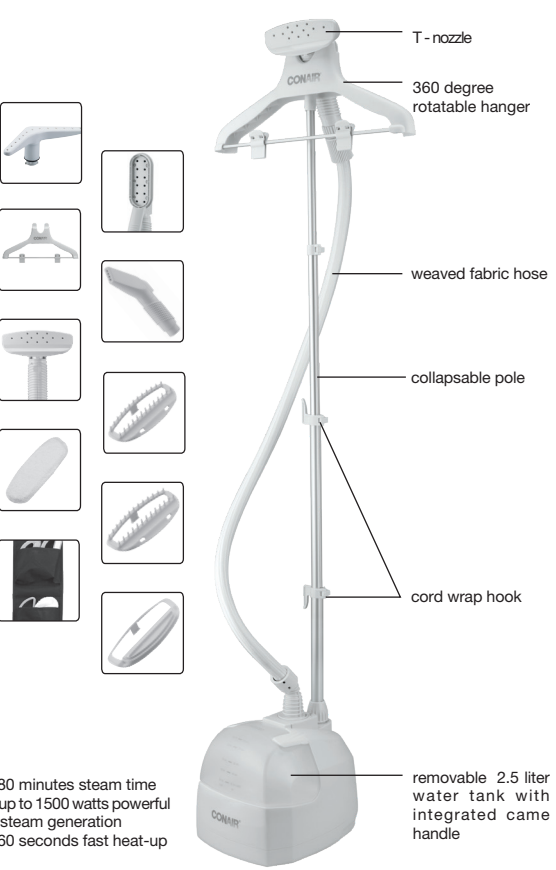

- 80 minutes steam time
- up to 1500 watts powerful steam generation
- 60 seconds fast heat-up

OPERATING THE STEAMER

- Make sure all hose connections are secure and tight.
- Make sure the rod is fully assembled and the hose is not twisted or kinked.
- Plug the power cord into a normal electrical outlet.
- Turn the switch to the "I" position or "II" position for high or low steam rate.
- The indicator will light to indicate when power is on.
- Steam will be produced from the nozzle in about one minute. **Caution: Hose will be hot when in use. Avoid prolonged contact.**
- Should the water container run out of water, the unit with automatically turn on and off, cycling the indicator lamp on and off.
- Switch off the unit for end of use or refilling the water container for reoperation.

CLEANING AND STORING

- Turn the switch to the "O" position and unplug from the power source.
- Wait for the steamer to cool completely for at least 30 minutes.
- Unplug power cord and gently wrap around built-in cord wrap for storage.
- Remove the steamer hose.
- Remove the water container from unit, unscrew valve and empty unused contents. Allow to air dry.
- Remove excess water from the reservoir by lifting the unit and pouring into a sink.
- Replace water container.
- Store the unit.



Cord wrap hook for easy storage of hooks and attachments

OTHER IMPORTANT NOTES

During operation, the steamer hose may gurgle. This is a normal result of condensation collection inside the hose. Simply lift the handle upward until the hose is extended to its full height. The gurgling will stop when the excess moisture inside the hose has had a chance to drain back into the base.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, stops producing steam and then starts again, even when the water tank is full, you may need to decalcify your steamer.

Decalcification refers to removing the calcium deposits which form over time on the metal parts of the steamer. For best performance, decalcify the unit from time to time. The frequency depends upon the hardness of the water used and frequency of use.

To decalcify, fill the water tank with a solution of 1/3 white vinegar and 2/3 water and replace the tank into its cavity in the steamer housing. Place the attachment head over a sink and switch the steamer to "II" run until half the amount has steamed (1 liter). Turn the steamer to the "O" position, unplug from electrical outlet, and allow to stand for 30 minutes.



Unscrew the drain hole cap on the base, and then place the main unit at normal operation position, insert the water tank into the base that water will drain out from the drain hole and bringing with limescale. Finally, fastened up the drain hole cap.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2-3 times. With

each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water after the completion of decalcification before using the steamer again to steam garments.

HOW TO STEAM

Grasp the steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles, slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

Burst of steam



For more difficult fabrics, simply press the lever on the T-nozzle for an additional burst of steam.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place on a towel rack. Heavier fabrics may require repeated steaming. Repeat as necessary with practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications. Do not directly touch velvet or silk with the steam head.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer. If you steam with hose not upright, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

To STEAM DRAPES

Wash and dry drapes as directed according to fabric type. Re-hang drapes and steam drapes when in place.

TROUBLE - SHOOTING THE STEAMER

PROBLEM	CAUSE	SOLUTION
Steamer fails to heat	Steamer not plugged in	Plug into electrical outlet
No steam	Water level is low	Turn switch to "O" and refill water container
Water drips from nozzle	Condensation in hose	Hold the hose vertically and allow water to drain back into unit
Nozzle gurgles	Condensation in hose	Hold the hose vertically and allow water to drain back into unit
Poor steam performance	Scale exist in the tank	Clean the unit

Note: Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

 
WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:
GREEN & YELLOW = EARTH
BLUE = NEUTRAL
BROWN=LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured red.
- The wire which is coloured GREEN &YELLOW must be connected to the terminal in plug which is marked with the letter "E" or by the earth symbol or coloured green or green and yellow.
- Neither BLUE or BROWN cord should be connected to the earth terminal of a pin plug marked with the letter "E" or coloured green or green and yellow.
- The unit is earthed.

With this appliance, if a 13 amp plug is used a 13 amp fuse must be fitted either in the plug or at the distribution board.



ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. To obtain this warranty service, please keep the original purchase receipt. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice.

OUT OF GUARANTEE

Call Conair Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email_asia@conair.com with your name, contact telephone number and email address and details of the fault.

CONAIR CUSTOMER SERVICE:

35/F., Standard Chartered Tower, Millennium City,
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong
Conair Customer Hotline: (852) 2751 4604
E-mail: email_asia@conair.com
Website: www.hkconair.com