

## HANDHELD FABRIC STEAMER

# 手提式蒸氣掛熨機



INSTRUCTION  
BOOKLET  
使用說明

CONAIR®  
CGS38H

## 手提式蒸氣掛熨機

### 重要安全指示

當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

### 使用前請細閱使用說明 電器應遠離水源

### 安全預防措施

**警告：**請小心包裝或產品上使用的塑膠袋，請擺放在遠離兒童的位置。  
請不要在嬰兒床、睡床、嬰兒車或兒童玩耍區內使用，因為塑膠袋的薄層有可能會堵塞鼻子及口腔，阻礙呼吸。此塑膠袋不是玩具，敬請注意。

**警告：**不要在盛水的浴缸、淋浴、洗臉盆或其它器皿附近使用本器具。

- 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路掣(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其他液體中。
- 如果電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 若電器曾跌落地或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或注水和清潔前請先拔去插頭。
- 本產品不該讓有智障，殘障，感官有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。兒童應受監管以保證他們不會把玩此產品。
- 待電器冷卻之後才收藏。
- 為避免損壞電源軟線，收藏時切勿將電源軟線纏繞在電器上並確保其不被拉扯、扭曲或曲折。
- 若蒸氣出口太接近皮膚、頭皮或眼睛，或不恰當使用此電器，噴出的蒸氣或會造成灼傷。為了減少接觸蒸氣噴出的熱水的危險，請在每次使用前以遠離人體的方式檢查電器。
- 切勿蒸熨正穿在身上的衣物。
- 接觸發熱的金屬部份、熱水或蒸氣或會引起灼傷。將電器倒轉時請小心，因可能有熱水在水箱內。
- 若注水方法不正確，請勿開動此電器，需用潔淨冷水來添加在水箱中，在硬水質的地區建議用過濾水。
- 不建議接駁伸延線使用，但若有此必要，請使用13安培延長線。若使用低安培的延長線有可能引致過熱。請小心處理延長線，以防絆倒他人。
- 切勿猛力拉扯電源軟線，應抓住插頭部份拔去電源。
- 使用掛熨機時請小心，因內有熱水。
- 僅限於使用過濾水。

**注意：**首次使用本產品前，建議先讓它運作大約5分鐘，然後拔下電源並讓它冷卻。在實際使用之前，排空水箱並重新注水。

## 此電器只適合家居使用

### 注水說明

- 請確保手提式蒸氣掛熨機沒有接上電源。
- 手握掛熨機手柄並直立於檯面。
- 另一隻手沿蒸氣噴嘴方向上推按鈕，即可解鎖。
- 將水箱從主機拉出。
- 橡膠水箱蓋置於水箱頂部。
- 開啟水箱蓋並注入過濾水（雜貨店有售）。為免水垢殘留而阻礙系統運作，建議只使用過濾水。
- 關上水箱蓋，並將水箱裝回主機上。請確保水箱穩妥安裝。



### 認識您的手提式蒸氣掛熨機



### 蒸熨配件

確定手提式蒸氣掛熨機已冷卻及其關上其電源後，可於蒸氣頭套上砂膠圈並確保穩妥套好。此時，套上砂膠圈的手提式蒸氣掛熨機已可使用；如有需要，可在砂膠圈扣上植毛刷或低溫輔助器。請注意，同一時間內只可啟動其中一款配件。

**注意：**剛用完的手提式蒸氣掛熨機，蒸氣頭可能仍有餘熱，更換配件時請額外小心。

### 配件：

- 砂膠圈：將衣物拉緊，更易熨直。
- 低溫輔助器：保護精緻衣物。
- 植毛刷：令衣物纖維鬆開，讓蒸氣更易滲入衣物。

### 手提式蒸氣掛熨機操作

- 將過濾水注入水箱。為免水垢殘留而影響產品的表現或阻礙系

- 統運作，建議只使用過濾水。
- 插上插頭，開啟電源並啟動手提式蒸氣掛熨機的開關按鈕。
- 藍色準備指示燈亮起並開始閃動，讓手提式蒸氣掛熨機預熱約40秒。當手提式蒸氣掛熨機預熱完畢可供使用時，準備指示燈將停止閃動並保持亮著。注意：首次使用或長時間沒有使用本產品前，請將水注入水箱以助手提式蒸氣掛熨機製造蒸氣。預熱過程中可能會產生微弱拍打聲音，乃屬正常現象。
- 本產品提供普通蒸氣及特大蒸氣兩款模式。藍色按鈕用於蒸熨精細或有輕微摺痕的衣物。紅色按鈕則用於蒸熨較厚或有頑固摺痕的衣物。
- 蒸氣噴嘴務必向外，不要向著自己或任何其他人士。按下藍色按鈕或紅色按鈕以釋出蒸氣。請確保蒸氣不要噴向自己或他人。
- 首次使用本產品時，請先於舊衣物上試用，以免有污物於生產或運輸途中殘留在產品上。
- 如欲停止產生蒸氣，請按下紅色按鈕、藍色按鈕或兩者至彈出狀態。
- 不使用時，請開機及拔出插頭。

### 摺痕直熨夾的使用

本產品頂部設有內置摺痕直熨夾。使用時，將衣物置於摺痕直熨夾下，按下蒸氣按鈕，蒸氣釋出時，便可沿著摺痕邊緣緩緩滑動手提式蒸氣掛熨機，以熨出筆挺的理想摺痕。注意：請小心蒸熨摺痕時，蒸氣會從噴嘴不斷釋出。

### 蒸熨提示：

- 於衣物不顯眼位置並以普通蒸氣功能測試該衣物能否承受蒸氣熱力。如衣物並無破損，則表示本產品可用於該衣物上。
- 於蒸熨前，請用植毛刷梳理衣物，以令衣物纖維鬆開，讓蒸氣更好地滲透。
- 掛起衣物。注意：請盡量避免使用金屬衣架。
- 將蒸氣噴嘴對著皺摺位置滑動，或需來回滑動數次以完全熨平摺痕。
- 若衣物較厚或摺痕較深，則可將蒸氣噴嘴定於相應位置數秒以更有效撫平摺痕。處理精細衣物時需加倍小心。
- 使用後，請關閉所有按鈕，包括紅色按鈕、藍色按鈕或兩者。清空水箱內的水以免滲漏。**拔除插頭前，請確保開關按鈕已設置至「O」。**拔下插頭時，雙手必須保持乾燥。
- 注意：如將衣物掛在門上蒸熨，請小心以免蒸氣損毀房門。
- 進行蒸熨時，請保持滑動手提式蒸氣掛熨機。不要在同一位置上持續停留多於幾秒，否則有可能令部分衣物收縮、熨焦或變色等。
- 對於較厚及耐用的衣物，如羊毛外套或床上用品等，可使用特大蒸氣功能，緩緩地蒸熨以達更理想效果。如常地，對於新熨衣物，請於衣物不顯眼位置並以普通蒸氣功能測試該衣物能否承受蒸氣熱力，並根據衣物質地及熨直效果調整技巧。

**注意：**每次蒸熨衣物前，請於衣物不顯眼位置測試色牢度。蒸熨亞麻布料、毛巾、手巾或手帕時，應掛在支架桿上或毛巾架上。

### 蒸熨摺紋

- 掛起衣物。
- 於衣物上相應位置摺出理想摺紋，固定並用蒸氣直接噴射該位置。

## 蒸熨領帶

- 將領帶掛在衣架上。
- 將蒸氣直接噴射到領帶。

## 蒸熨衣肩及衣袖

- 掛起衣物，建議使用有軟墊的衣架。
- 以捲起的毛巾填滿衣肩或衣袖。
- 將蒸氣直接噴射到相應位置。

## 清除水垢

若手提式蒸氣掛熨機蒸氣釋出的速度開始減慢，或蒸氣只間歇性地釋出，則需要清除水垢。清除水垢是指清除於金屬機件上日積月累的鈣化物質。為維持「美康雅手提式蒸氣掛熨機」的最佳效能，請經常清除水垢。清理密度視乎水的硬度及使用頻率而定。要清除水垢，只需混和1/3白醋及2/3清水並注入水箱。插上電源，待準備指示燈亮起，啟動蒸氣觸發器至所有水醋混合物蒸發。鬆開蒸氣觸發器，拔去電源，待其冷卻約30分鐘。重複以上步驟，通常2-3次，直至蒸氣釋出的速度回復正常。每次請用新混和的水醋混合物。清除水垢後，用新的潔淨冷水重複以上步驟一次，然後才蒸熨衣物。

**注意：**不同地區的水，其礦物含量不同。為確保手提式蒸氣掛熨機的正常運作，收存前請把水箱清洗乾淨及倒去剩餘的水。

## 電線系統

總電線的顏色根據其性質而定：

綠黃色代表地線  
藍色代表中線  
啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭，必須依照以下重新裝配操作說明：  
- 藍色的電線應和電路接頭“N”接駁。  
- 啡色的電線應和電路接頭“L”接駁。  
- 綠黃色的電線應和電路接頭“E”或 ⊕ 接駁。  
- 切勿將藍色或啡色的電線接駁在電路接頭的地線“E”或 ⊕ 插頭上。

此電器使用十三安培電插頭時，請採用十三安培的保險絲。若使用其他電插頭，請採用十三安培保險絲。

## 一年保養限期

在您購買日期起一年內，在正常使用的情况下，如產品的品質或零件有任何問題，美康雅顧客服務中心將會為您免費提供維修或換貨服務。

**注意：**此項保修不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。美康雅公司有權在不預先通知的情況下更改條款和說明書。如需獲得此保修服務，請保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地的美康雅顧客服務中心處理。

## 保修期之後

請致電使用說明書中所列出您所在地的美康雅顧客服務中心，詢問維修服務詳情，或是電郵至email\_asia@conair.com，附上您的名字，電話號碼和電郵地址，及說明產品問題的詳細情況。

## 美康雅顧客服務中心

香港九龍觀塘觀塘道388號創紀之城渣打中心35樓  
顧客服務熱線：(852) 2751 4604  
電郵：email\_asia@conair.com  
網址：www.hkconair.com

## CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	01/12/22
Customer	VS-HK
Model No.	CGS38H
Description	IB
Job No.	
Reference No.	IB-18/097A
Revision No.	1
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Phoebe Laung
Vendor	MILLPLAN
Supplier	

折疊方法  
Folding method:  
12 pages (6 x 2)



CGS38H

IB-18/097A



## CONAIR HANDHELD FABRIC STEAMER

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

#### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before filling or cleaning it.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
- Do not steam garments while on a person.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
- Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. In hard water areas, we recommend the use of distilled water.
- Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

- Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Use with caution when carrying steamer as it contains hot water.
- Use distilled water only.

**NOTE:** Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplug the unit and allow it to cool. Empty container and refill before actually using.

### HOUSEHOLD USE ONLY

#### FILLING INSTRUCTIONS

- Make sure the unit is unplugged.
- Stand the unit on a table and grasp with one hand.
- With other hand, move the release switch up toward the steam head nozzle.
- Pull the reservoir out, away from the steamer body.
- The rubber inlet cover is located on the top of the water reservoir.
- Open the inlet cover and fill the reservoir with distilled water (which can be found in grocery stores). We recommend that you use distilled water only as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
- Close the inlet cover and return the reservoir to its place, making sure that it snaps in place and is secure.



### GET TO KNOW YOUR STEAMER



### BRUSH ATTACHMENT

With the garment steamer off and cool, snap the silicone band attachment over the steam head ensuring it is firmly affixed. At this point the silicone band can be used or you can choose to affix either the Bristle Brush or Low Temperature Guide inserts into the channel on the top of the silicone band attachment as desired. Note, only one function of the 3-In-1 attachment can be used at a time.

**CAUTION:** Use extreme care when changing the attachments after the unit has been in use as the steam head will continue to be hot.

#### ACCESSORIES:

- Silicone Band: Pulls fabric taut for easier steaming.
- Low Temperature Guide: Helps protect delicate fabric.
- Bristle Brush: Opens fibers for better steam penetration.

#### OPERATING THE STEAMER

- Fill water reservoir with distilled water. We recommend that you use distilled water only, as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
- Plug the unit into the electrical outlet and press the on/off button on the back of the steamer.
- The blue READY light will illuminate and begin blinking. Allow 40 seconds for the unit to warm up. The appliance is ready to use when the READY light stops blinking and remains solid. Note: Before first use or when the unit has not been used for a long period of time, it will be necessary to prime (i.e., fill with water) the internal tank while the steamer prepares to steam. You may hear a small tapping noise during the heat-up process; this is normal.
- Your steamer has 2 options for steam, regular Steam and Turbo. Use the Steam setting (blue button) for delicate fabrics or freshening lightly wrinkled garments. Use the Turbo setting (red button) for thicker fabrics and heavily wrinkled articles.
- Pointing the steam jets away from you, and anyone else in the room, press either the blue Steam button or the red Turbo button to release steam. Always have steam facing away from you or anyone in the room.
- When first using the device, test on an old cloth, as there may be sediment left from the manufacturing process or transportation.
- To stop the flow of steam, depress the button(s) that you have turned on, either the red, blue, or both.
- Turn off and Unplug the device when it is not in use.



#### USING CREASER

This garment steamer has a built-in creaser on the top of the unit. To use, slide garment under the clip and align edge with the pattern as marked on the creaser. Press the Steam button and steam will issue from the port on the top of the unit. Slide the steamer along the edge of the garment to create a sharp crease. Note: Steam will continue to emit from the steam slot on the front of the unit during creaser use!

#### STEAMING TIPS

- First test unit on an inconspicuous area of the item to be steamed using the regular Steam setting to ensure fabric can tolerate the

effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.

- To prepare your fabric for steaming, brush it with the brush attachment. This will loosen the fibers and allow better steam penetration.
- Hang your garment or fabric. Note: Avoid using metal clothes hangers, if possible.
- Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
- For heavier fabrics or severely wrinkled fabrics, you may position the steamer head directly on the fabric for a few seconds to remove wrinkles. Be cautious when working with delicate fabrics.
- After use, turn unit off by depressing the button(s) that you have turned on, either the red, blue, or both. Empty any remaining water from the tank to avoid leakage. With dry hands, unplug your garment steamer from the outlet. **BE SURE TO PRESS THE BUTTONS "O" PRIOR TO UNPLUGGING THE UNIT.**
- CAUTION:** If hanging garment on a door while steaming, be careful not to damage the door with steam.
- When steaming, always keep the unit in motion. Do not continuously hold steamer over an area or touch steamer jets directly to fabric for more than a few seconds as this can cause damage, including shrinkage, melting, or color shift on certain types of material.
- In the case of heavier, durable fabrics such as wool coats or bedding, the Turbo setting and slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed using the regular Steam setting to ensure fabric can tolerate the effects of steam, and adjust your technique as needed to obtain the results desired.

**NOTE:** Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place onto a towel rack.

#### TO MAKE CREASES OR PLEATS

- Hang garment.
- Fold fabric where crease or pleat is desired. Hold fold in place while applying steam directly to fold.

#### TO STEAM TIES

- Hang tie on hanger.
- Apply steam directly to tie.

#### TO STEAM SHOULDERS AND SLEEVES

- Hang garment, preferably on a padded hanger.
- Fill out shoulders or sleeves with folded towel.
- Apply steam to garment.

#### DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the Conair Garment Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your water and how often you use the steamer. To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water reservoir.

Plug the unit into electrical outlet. Wait the ready light goes on then activate the steam trigger, and run until all amount has steamed. Release the steam trigger, unplug from electrical outlet, and allow

to sit for 30 minutes.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2 to 3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification before using the unit again to steam garments.

**Note:** Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

#### WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW = EARTH  
BLUE = NEUTRAL  
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N'.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L'.
- The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or the ⊕ symbol.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter 'E' or the ⊕ symbol.

With this appliance, if a 13 amp plug is used a 13 amp fuse should be fitted. If any other type of plug is used a 13 amp fuse must be fitted either in the plug or at the distribution board.

#### ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. To obtain this warranty service, please keep the original purchase receipt. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice.

#### OUT OF GUARANTEE

Call Conair Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email\_asia@conair.com with your name, contact telephone number and email address and details of the fault.

#### CONAIR CUSTOMER SERVICE:

35/F, Standard Chartered Tower, Millennium City,  
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong  
Conair Customer Hotline: (852) 2751 4604  
E-mail: email\_asia@conair.com  
Website: www.hkconair.com