

SUPREME FABRIC STEAMER

高溫蒸氣掛熨機



INSTRUCTION
BOOKLET
使用說明

CONAIR®
CGS88H

高溫蒸氣掛熨機

高溫蒸氣掛熨機能有效熨平頑固皺痕，適用於所有織物料，如傢俬套、床褥及窗簾等；即使絲質、亞麻布、鑲有珠片或閃片的衣物皆可。

蒸氣以每分鐘25克的高壓滲透至衣物深層纖維，加上利用雙重熱效技術以產生更快更熱的蒸氣，能有效去除即使是粗厚物料上的皺痕或摺痕。傳統熨斗型設計加上內置摺痕直熨夾能更輕易地熨出筆直褲子及襯衫。

重要安全指示

當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

使用前請細閱使用說明
電器應遠離水源

安全預防措施

警告：請小心包裝或產品上使用的塑膠袋，請擺放在遠離兒童的位置。
請不要在嬰兒床、睡床、嬰兒車或兒童玩耍區內使用，因為塑膠袋的薄層有可能會堵塞鼻子及口腔，阻礙呼吸。此塑膠袋不是玩具，敬請注意。

警告：不要在盛水的浴缸、淋浴、洗臉盆或其它器皿附近使用本器具。

- 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路擊(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其他液體中。
- 如果電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 若電器曾跌落或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或注水和清潔前請先拔去插頭。
- 本產品不該讓有智障、殘障、感官有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。兒童應受監管以保證他們不會把玩此產品。
- 待電器冷卻之後才收藏。
- 為避免損壞電源軟線，收藏時切勿將電源軟線纏繞在電器上並確保其不被拉扯、扭曲或曲折。
- 若蒸氣出口太接近皮膚、頭皮或眼睛，或不恰當使用此電器，噴出的蒸氣或會造成灼傷。為了減少接觸蒸氣噴出的熱水的危險，請在每次使用前以遠離人體的方式檢查電器。在使用本產品時應小心拍出生熱蒸氣。
- 切勿蒸熨正穿在身上的衣物。
- 蒸氣噴嘴及喉管應置於水箱以上位置。
- 接觸發熱的金屬部份、熱水或蒸氣或會引致燙傷。將電器倒轉時請小心，因可能有熱水在水箱內。
- 若注水方法不正確，請勿開動此電器，需用潔淨冷水來添加在水箱中，在硬水質的地區建議用過濾水。
- 不建議接駁伸延線使用，但若有此必要，請使用13安培延長線。若使用低安培的延長線有可能引致過熱。請小心處理延長

- 線，以防絆倒他人。
- 使用本產品時，切勿打開水箱蓋。
- 將三角形噴嘴放置在托架上時，請確保放置穩妥。

警告

- 切勿讓任何東西跌入或放入開口或管道中。
- 當掛熨機仍在發熱或已接上電源，切勿將蒸氣噴嘴直接放在表面或電線上。
- 更換配件前，應確認已關閉掛熨機及切斷電源，以免被蒸氣灼傷。
- 啟動本產品前，必須拉直蒸氣喉管並掛於托架掛鉤上。
- 切勿猛力拉扯電線，應握著插頭部份以拔去電源。
- 接觸發熱的金屬機件、熱水或蒸氣可引致燙傷。將電器倒轉時請小心及留意水箱內是否仍有熱水。
- 使用本產品時請小心，以防內有熱水溢出。

注意：使用時蒸氣喉管會發熱。請避免長時間接觸。

請保留此安全指示

此電器只適合家居使用

安裝說明

第一步：掛架安裝

- 將支架最粗的一端插入托架座上。確保螺絲孔背向主機。
- 將保險匙插入螺絲孔並扭緊，直至支架穩固。
- 若需延長支架，請開啟安全鎖，拉出支架伸縮部分，最後鎖上安全鎖。於上層部份重複此步驟即可。
- 將掛架放在噴嘴頂部及鎖上安全鎖。

 
第二步：注水程序

- 只可將潔淨的冷水注入水箱。
- 在硬水質的地區，建議使用過濾水以減少水垢的積聚。
- 利用手柄將水箱從主機拉出。
- 打開水箱頂部的蓋以注入合適水量。切勿過量注入。
- 合上水箱蓋並將水箱放回原位及確保水箱妥善安裝。

操作說明

重要提示！每次蒸熨衣物前，請於衣物不顯眼位置測試色牢度。

- 插上插頭，開啟電源。
- 踩下腳踏以啟動本產品。綠色指示燈亮起並開始間歇地閃動。
- 當掛熨機預熱完畢可供使用時，綠色指示燈將停止閃動並保持亮著。此過程約需90秒。
- 啟動蒸氣頭上的觸發器以製造蒸氣。若需持續使用，按下按鈕並向下推以鎖上觸發器。如圖示1。

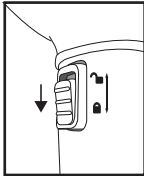


圖示 1

- 利用機頂上的按鈕設定蒸熨模式。⏸ 用於一般聚焦蒸熨，⏹ 用於摺痕直熨。
- 如掛熨機水量低，會發出「呖」聲，提示需要加水。

- 如要關閉掛熨機，只需踩下腳踏。綠色指示燈也會熄滅。
- 使用掛熨機時，切勿將蒸氣噴嘴及喉管放於地上。


蒸熨衣物說明

 - 每次蒸熨衣物前，請於衣物不顯眼位置測試色牢度。
- 發熱底板不要直接接觸精細衣物。
- 將衣物掛在掛架上，或如果蒸熨褲子，則合上掛架並將褲子連架掛在掛架上。
- 本產品提供兩個伸縮夾子。夾著衣物底部並使其拉直，以助蒸熨及去除皺痕。如圖示2。

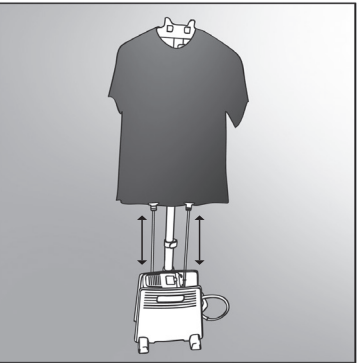

圖示 2

 - 拿起蒸氣頭，將蒸氣噴嘴背向自己並對著衣物。
- 確保蒸熨模式設置到⏸ 一般聚焦蒸熨功能。
- 從衣物底部開始，讓蒸氣由下而上上升，更快捷地熨平摺痕。
- 本產品非常適用於精細衣物。其高壓蒸氣滲入深層衣物纖維，令纖維鬆開，無損衣物結構。
- 若遇上頑固皺痕，將發熱底板直接置於物件上。熱蒸氣加上發熱底板雙管齊下，輕易撫平頑固皺痕或摺痕。
- 本產品於蒸氣頭設有內置摺痕直熨器，可隨意為襯衣、褲子等衣物熨出理想摺痕。
- 向右轉動按鈕至⏹ 以使用摺痕直熨功能。蒸氣便會於中間空隙釋出。
- 將衣物置入空隙，拿著手柄沿摺痕向上緩緩移動。如圖示3。

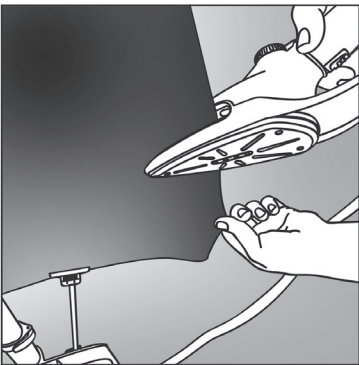

圖示 3

注意：請小心以免蒸氣灼傷雙手

- 沿著衣物緩緩移動蒸氣頭。
- 衣物纖維鬆開，以撫平皺痕。

提示：有些物料可能較適合於底面蒸熨。

蒸熨柔軟傢俬外套及衣物說明

- 蒸熨毛巾、床單及檯布時，應將其掛在毛巾架或衣架上。
- 或可選擇橫熨方式，既可避免水漏，又可避免蒸氣不穩定輸出。此方式最適合用於床褥、床單、梳化套及其他較柔軟傢俬外套。
- 其用法與傳統熨斗使用方式一樣，橫放並置於衣物上。熱蒸氣及發熱底板有助去除異味及熨平皺痕，令衣物清新乾淨。

清洗及收納說明

- 踩下腳踏以關閉電源，確保綠色指示燈熄滅及拔去插頭。
- 將蒸氣頭掛於機上相應位置，等至少30分鐘至掛熨機完全冷卻。
- 移除水箱，倒掉剩餘的水。
- 用紙巾抹乾水箱內的水，或傾斜於洗手盤以晾乾容器。
- 需待水箱完全乾透。
- 拔去電線並繞在電線收藏盒上。
- 開啟保險鎖以取出伸縮支架，然後將喉管收好及將蒸氣頭放回相應位置，以妥善收藏掛熨機。
- 利用產品本身的滑輪以更輕易移動及收藏。
- 本產品小巧輕便，易於收納，可放於櫃櫃、衣櫃或其他細小空間。

日常保養

為維持本產品的最佳效能，建議每星期清洗水箱一次。清洗前請確保本產品已關閉，沒接上電源及已冷卻。使用前或收納前，請以濕布清潔水箱及再以乾布拭乾。

清除水垢

若掛熨機蒸氣釋出的速度比正常慢，或停止輸出，則需要清除水垢。水垢是於金屬機件上日積月累的鈣化物質。為維持掛熨機的最佳效能，請經常清除水垢。清理密度視乎水的硬度及使用頻率而定。

注意：在開始進行清除水垢操作前請先拔去插頭。

- 要清除水垢，只需混和1/3白醋及2/3清水並注入水箱。
- 將水箱放回原位。
- 接上電源及啟動腳踏開關。
- 保持蒸氣輸出，直至一半水醋混合物蒸發（約1公升）。
- 重複以上步驟，至蒸氣釋出的速度回復正常。每次請用新混和的水醋混合物。
- 移除水箱及清洗乾淨。
- 用新的潔淨冷水重覆以上步驟一次，然後才蒸熨衣物。
- 關閉蒸熨機及拔去插頭。

常見問題

問題1：沒有蒸氣輸出。

- 水量過低。關閉蒸熨機及拔去插頭以再注入適當水量。

問題2：有水於蒸氣頭滴下。

- 蒸氣於喉管里液化。垂直拿著喉管以讓水回流至水箱。

問題3：蒸氣輸出不良。

- 可能有水垢殘留於水箱。請參閱上述「清除水垢」部分。

電線系統

總電線的顏色根據其性質而定：

- 綠黃色代表地線
- 藍色代表中線
- 啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭，必須依照以下重新裝配操作說明：
– 藍色的電線應和電路接頭“N”接駁。
– 啡色的電線應和電路接頭“L”接駁。
– 綠黃色的電線應和電路接頭“E”或⓪ 接駁。
– 切勿將藍色或啡色的電線接駁在電路接頭的地線“E”或⓪ 插頭上。

此電器使用十三安培電插頭時，請採用十三安培的保險絲。若使用其他電插頭，請採用十三安培保險絲。

一年保養限期

在您購買日期起一年內，在正常使用的情况下，如產品的品質或零件有任何問題，美康雅顧客服務中心將會為您免費提供維修或換貨服務。

注意：此項保修不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。美康雅公司有權在不預先通知的情況下更改條款和說明書。如需獲得此保修服務，請保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地區的美康雅顧客服務中心處理。

保修期之後

請致電使用說明書中所列出您所在地區的美康雅顧客服務中心，詢問維修服務詳情，或是電郵至email_asia@conair.com，附上您的名字，電話號碼和電郵地址，及說明產品問題的詳細情況。


美康雅顧客服務中心

香港九龍觀塘觀塘道388號創紀之城渣打中心35樓
顧客服務熱線：(852) 2751 4604
電郵：email_asia@conair.com
網址：www.hkconair.com

CONTINENTAL CONAIR LIMITED
CHINA CREATIVE DEPARTMENT

Date	1/19/2022
Customer	Conair-HK
Model No.	CGS88H
Description	IB
Job No.	
Reference No.	IB-18/098A
Revision No.	0
Color	1C+10(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Phoebe Laung
Vendor	Tsann Kuen
Supplier	

 折疊方法
Folding method:
16 pages (6x2)

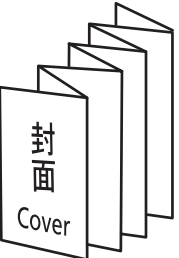

SUPERME FABRIC STEAMER

This Superme Fabric Steamer can eliminate those tough and difficult to iron creases from all fabrics including clothing, upholstery, mattresses and curtains. Use it on all fabrics, even silks and linens and fabrics with beads and sequins.

The high pressured 25g/min steam output penetrates deep into the fabric fibres, while dual heat technology provides faster, hotter steam to eliminate creases and wrinkles from even the toughest materials. A traditional iron-shaped design with a built-in creaser allows you to steam your trousers and shirts with ease.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

- WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.
Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.
 - WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
 - Never immerse the unit in water or any other liquid.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Do not use the unit if it has fallen or if it appears to be damaged or it is leaking.
 - Do not leave the unit unattended when it is plugged in or switched on.
 - Unplug the unit immediately if you have problems with using it.
 - Do not use any accessories other than those recommended by manufacturer.
 - Unplug the unit after each use and before cleaning it or filling it.
 - This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person



responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. Care should be taken when using the appliance due to the emission of steam. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
- Do not steam garments while on a person.
- Always keep the hose and nozzle elevated above the water container.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
- Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. In hard water areas, we recommend the use of distilled water.
- Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere-rated cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- Do not open water tank lid during use.
- When placing the triangle nozzle on its stand, ensure the unit is placed stably.

CAUTION

- Never drop or insert any object into any opening or hose.
- Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.
- When changing attachment, ensure the steamer is switched OFF and unplugged from the mains, to avoid contact with hot steam.
- Before unit is turned on the hose must be extended, and place it in the hook.
- Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn a steam appliance upside down - there may be hot water in reservoir.
- Use with caution when carrying steamer as it contains hot water.

CAUTION: Hose will be hot when in use. Avoid prolonged contact.

KEEP THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

CLOTHES & FABRIC STEAMER ASSEMBLY

STEP 1 - HANGING POLE

- Insert the thickest end of the pole into the receptacle hole on the steamer unit. Ensure the screw hole is facing away from the unit.

- Screw the key into the hole and tighten until the pole becomes secure.
- To extend the pole, open the locking tab and pull out the section of the telescope pole and close the locking tab to secure it in place. Repeat this with the upper section.
- Place the hanger onto the top nozzle and close the locking tab.

STEP 2 - FILLING THE WATER TANK

- Only use clean cold water in the water tank.
- We recommend the use of distilled water in areas of hard water to limit the build up of limescale.
- Remove the water tank from the steamer by the handle.
- Open the tank by lifting the lid on top and fill to the desired level. Do not overfill.
- Close the lid and replace the water tank back into its position on the main unit, ensuring that it is securely seated.

INSTRUCTIONS FOR USE

IMPORTANT! Before use, always test fabric for colour fastness in an inconspicuous spot.

- Plug into a suitable mains supply.
- To turn the appliance on, press on the pedal. A green light will appear and will flash intermittently.
- When the steamer is ready to use, the green light will stop flashing and will remain constant. This will take approximately 90 seconds.
- Press the trigger switch on the steamer head handle to produce steam. You can lock the trigger switch in place for continuous use by pressing the switch in and sliding down. See Fig 1.

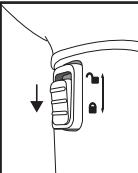 


Fig 1

- Use the switch on top of the steamer to select the steam setting. for general concentrated steaming and for creaser steaming.
- If the appliance is running low on water; the beep will indicate the water needs to be refilled.
- To turn the unit off, simply press down on the foot pedal. The green light indicator will turn off.

NEVER LET THE STEAMER NOZZLE AND HOSE REST ON THE FLOOR FOR ANY LENGTH OF TIME WHILE IN USE.

HOW TO STEAM CLOTHES

- Always test fabric for colour fastness in an inconspicuous spot.
- Do not touch / press the sole plate directly against delicate fabrics.
- Attach to your garment on the hanger, or if steaming trousers, keep the hanger attachment closed and hang the trouser hanger to the side of the hanger attachment.
- The fabric Steamer includes x2 retractable tension clips. Clip these at the bottom of the garment which pulls the material

tight, making it easier to steam and remove wrinkles. See Fig 2.

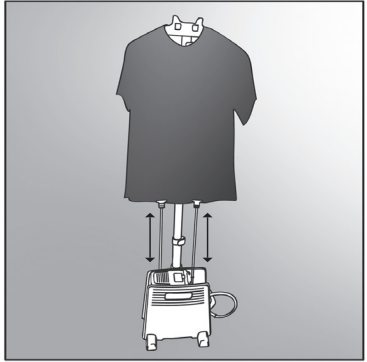 


Fig 2

- Hold the steamer head, with the steam jets facing away from you and onto the material.
- Ensure the steamer setting is selected for concentrated steaming.
- Begin at the bottom of the fabric to allow the steam to rise, removing creases faster.
- The fabric steamer is perfect for use on delicate fabrics. The high steam pressure reaches deep within the fabric to relax the fabric fibres, causing no harm to the material.
- For heavier and more troublesome creases. Press the soleplate against the fabric. The hot steam and heated soleplate work together to effortlessly eradicate the tougher creases and wrinkles.
- The fabric steamer also features a creaser on the steamer head to allow you to create and refresh your creases on shirts, trousers and other garments.
- Turn the dial to the right to select the creaser setting . The steam will then be released from inside the crease gap.
- Slide the fabric inside the gap located on the handle, moving the head up the garment crease material. See Fig 3.

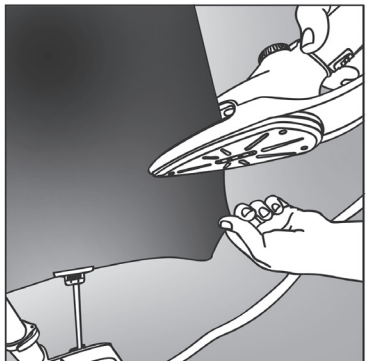 


Fig 3

CAUTION - AVOID SCALDING YOUR HANDS WITH HOT STEAM

- Slowly move the steamer head over the garment.

- The fibres of the fabric will relax, eliminating creases.

Note: Some fabrics are best steamed on the underside of the material.

HOW TO STEAM SOFT FURNISHINGS AND FABRICS

- Hang towels, sheets and tablecloths over a towel rail or airer whilst steaming.
- Alternatively use the steamer horizontally, without worry of leakage and inconsistent steam output. This makes it perfect for use on your mattress, bed covers and upholstered sofas and soft furnishings.
- Simply run the head over the article in the same way as using a traditional iron. The hot steam and heated sole plate will refresh, remove creases and wrinkles and eliminate odours to leave it feeling clean.

AFTER USE - CLEANING AND STORING

- Press the ON/OFF pedal to turn off the main steamer unit, ensure the green light is off and unplug from the mains.
- Hang the steamer head in the available slot on the top of the hanger and allow it to completely cool for at least 30 minutes.
- Remove the water tank, and empty any unused water into a sink.
- Remove any water left in the reservoir of the steamer by using a tissue, or tipping the steamer over a sink, to pour any excess water away.
- Allow to dry thoroughly.
- Wrap the power cord around the cord wrap.
- To store the steamer, open the locking tabs to withdraw the telescopic pole. Stow the hose in the compartment on the side and hook the head onto the designated slot.
- Use the tilt and wheel system to manoeuvre the unit.
- The unit can easily be stored in a cupboard, wardrobe or small space because of its compact size.

MAINTENANCE

To maintain optimum performance it is recommended that you rinse out the water tank on a weekly basis. Always ensure that the steamer is switched OFF and unplugged before cleaning. Wait for it to cool down before cleaning. Wipe with a damp cloth and dry thoroughly before using or storing away.

REMOVING LIMESCALE

If the Clothes & Fabric Steamer begins to produce steam more slowly than usual or stops producing steam you may need to remove limescale from your steamer. Limescale can build-up over time on the metal parts of the steamer. For best performance from your steamer, you should remove limescale from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

Note: Unplug the appliance before removing limescale.

- To remove limescale, prepare a solution of 1/3 white vinegar and 2/3 cold water and add to the water tank.
- Replace the water tank.
- Plug into the mains, and switch ON using the pedal.
- Keep the steamer on and producing steam until half the amount of limescale removing solution has steamed (1 litre).

- Repeat the above procedure as many times as necessary until a normal steam rate returns. With each repeated cycle, use a fresh solution of vinegar and water.
- Remove the water tank and rinse out.
- Run one cycle of fresh, cold water through the steamer at the completion of limescale removal, before using the steamer to steam garments.
- Turn the steamer OFF and unplug from the mains.

FREQUENTLY ASKED QUESTIONS

Q1 - No steam produced.

- The water level could be low. Switch the steamer OFF and refill.

Q2 - Water is dripping from the steamer head.

- There is condensation in the hose. Hold the hose vertically and allow any water to drain back into the steamer.

Q3 - Poor steam performance.

- There could be limescale in the water tank. Follow the instructions on how to remove limescale.

WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW = EARTH
BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N'.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L'.
- The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or the
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter 'E' or the

With this appliance, if a 13 amp plug is used a 13 amp fuse should be fitted. If any other type of plug is used a 13 amp fuse must be fitted either in the plug or at the distribution board.

ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. To obtain this warranty service, please keep the original purchase receipt. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice.

OUT OF GUARANTEE

Call Conair Service Centre in your region as listed in this Instruction

Booklet for details of repair service. Or email to us at email_asia@conair.com with your name, contact telephone number and email address and details of the fault.

CONAIR CUSTOMER SERVICE:

35/F., Standard Chartered Tower, Millennium City,
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong
Conair Customer Hotline: (852) 2751 4604
E-mail: email_asia@conair.com
Website: www.hkconair.com

CGS88H

IB-18/098A