

CONAIR DUAL BLADE PRECISION  
TRIMMER & MIRROR

女士雙刀頭面部修毛器及化妝鏡



INSTRUCTION  
BOOKLET  
使用說明

CONAIR®  
CLT3PH

認識面部修毛器



使用說明

使用前

首次使用前，請先於手臂或腿作小範圍測試。若皮膚產生過敏反應，請即停止使用。切勿用於敏感或過敏皮膚上。將產品放於兒童觸及不到的地方。

 
操作產品

修毛器配備兩種刀片，大刀片用於修整身體毛髮及眉毛，小刀片用於細緻修飾。除此還配有修剪梳，當不需徹底去除毛髮而只作修短時適用。修剪梳有兩面，長齒用於身體毛髮，短齒用於眉毛。若留較長毛髮，將修剪梳推到L標示位置；若留較短毛髮，將修剪梳推到S標示位置。安裝修剪梳時，請確保電源關閉及將修剪梳與刀

片接上。使梳齒與刀片向同一方向及梳頂與刀頂水平（圖1）。

欲完全去除毛髮，請使用不帶梳的修毛器。向上推動開關以啟用修毛器，用畢則向下推動以關閉。收藏修毛器時，滑動刀片上的修剪梳。確保修剪梳上的三角標誌與機身指示器的標誌相接合（圖2）。

然後於修剪梳上套上保護蓋，令保護蓋及手把上的三角標誌接合（圖3）。

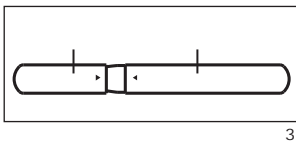

修毛提示

1. 將修毛器垂直置於皮膚上，向著順毛方向修剪。
2. 繼續向著順毛方向移動。切勿過分用力推動，否則可導致刀片損毀及皮膚損傷。
3. 修毛時，用手拉緊皮膚以令刀片更緊貼肌膚。

電池更換

更換電池時，需將機身下端除下以取出/置入電池，然後安裝好即可。電池耗盡後應妥善棄置，切勿燃燒。

1. 確保電源關閉，將保護蓋除下，捉緊機體上端部分及拉出電池盒蓋。
2. 置入一枚AAA電池。請注意，確保電池按兩極方向正確安裝（+及-極）。若產品有一段時間不作使用，請將電池拆除。
3. 合上修毛器時請關閉電池蓋上的開關。
4. 置入電池前請先清潔電池接觸點及機體其他接觸點。
5. 及時除下電池。
6. 使用鹼性電池。

 
 
請勿於淋浴或浸浴時使用產品。

建議使用鹼性電池以保持產品運作良好。

保養須知

切勿以水清潔或於潮濕空間使用本產品。不要使用強力清潔劑。應以溫和清潔清潔產品。

1. 請確保修毛器已關閉。
2. 向下按刀片拆卸按鈕以拆除刀片。
3. 小心除下刀片。
4. 用小毛刷掃走毛髮或塵埃，切勿以尖銳物件清除。

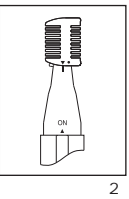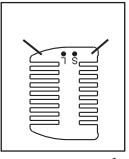

5. 清潔完畢即放回刀片及確保開關關閉。收納產品前請套回保護蓋。

安全預防措施

警告：包裝或產品上使用的膠袋可能會造成危險。請擺放在嬰兒及兒童觸及不到的位置。



請勿於嬰兒床、睡床、嬰兒車或兒童玩樂範圍內使用產品。膠袋的薄層可能會堵著鼻子及口腔，阻礙呼吸。此膠袋不是玩具。

警告：不要在盛水的浴缸、淋浴缸、洗臉盆或其他器皿附近使用本產品。



此標誌為「沐浴時不適用」

1. 根據本使用說明書所述之用途使用本產品。
2. 切勿把本產品放入或掉進水或其他液體中。
3. 若本產品曾跌落地或有任何不妥，請馬上停止使用。
4. 請不要使用非本產品提供的任何配件。
5. 如刀鋼或刀齒已破裂、破損或鬆脫，切勿使用並即時更換。使用受損的刀鋼可能會引致受傷。
6. 本產品不該讓有智障、殘障、感官有缺陷或缺乏使用電器經驗與常識的人士（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。兒童應被監管以保證他們不會將此產品當成玩具。
7. 切勿將已接上電源或開啟的電器置之不理。
8. 如若在使用中有任何不妥，請馬上停止使用及將電池除出。
9. 每次用完後或清潔前請先關閉電源。
10. 待電器冷卻之後才收藏。
11. 當本產品處於使用狀態，不可隨意放在任何物件上。
12. 該產品不應讓兒童使用、清潔或手持。將產品放於兒童觸及不到的地方。

安全棄置

為保護環境，當電池電量耗盡時，應當將電池棄置於回收箱。如果電池洩漏，注意避免與皮膚接觸，並將其棄置於回收箱。禁止將電池丟入火中，除非是在受到監控的情況下進行焚燒。如果不遵守這一注意事項，可能引致爆炸。切勿嘗試為一次性電池充電，否則可能導致洩漏、火災或爆炸。

一年保養限期

在您購買日期起一年內，在正常使用的情況下，如產品的品質或零件有任何問題，美康雅顧客服務中心將會為您免費提供維修或

換貨服務。

注意：此項保修不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品，美康雅公司有權在不預先通知的情況下更改條款和說明書。如需獲得此保修服務，請保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地區的美康雅顧客服務中心處理。

保修期之後

請致電使用說明書中所列出您所在地區的美康雅顧客服務中心，詢問維修服務詳情，或是電郵至EMAIL\_ASIA@CONAIR.COM，附上您的名字，電話號碼和電郵地址，及說明產品問題的詳細情況。

美康雅顧客服務中心

香港九龍觀塘觀塘道388號創紀之城渣打中心35樓

顧客服務熱線：(852) 2751 4604


電郵：EMAIL\_ASIA@CONAIR.COM

網址：WWW.HKCONAIR.COM

CONTINENTAL CONAIR LIMITED  
CHINA CREATIVE DEPARTMENT


Date	1/20/22
Customer	CONAIR-HK
Model No.	CLT3PH
Description	IB
Job No.	19CF031
Reference No.	IB-19/145A
Revision No.	0
Color	1C+1C(Black)
Open Size	460mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Phoebe Leung
Vendor	Chesson
Supplier	

 折疊方法  
Folding method:  
10 pages (5 x 2)

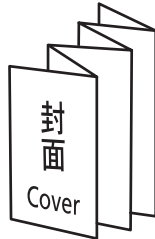

## CONAIR LADIES DUAL BLADE PRECISION TRIMMER & MIRROR
 
### GET TO KNOW YOUR TRIMMER

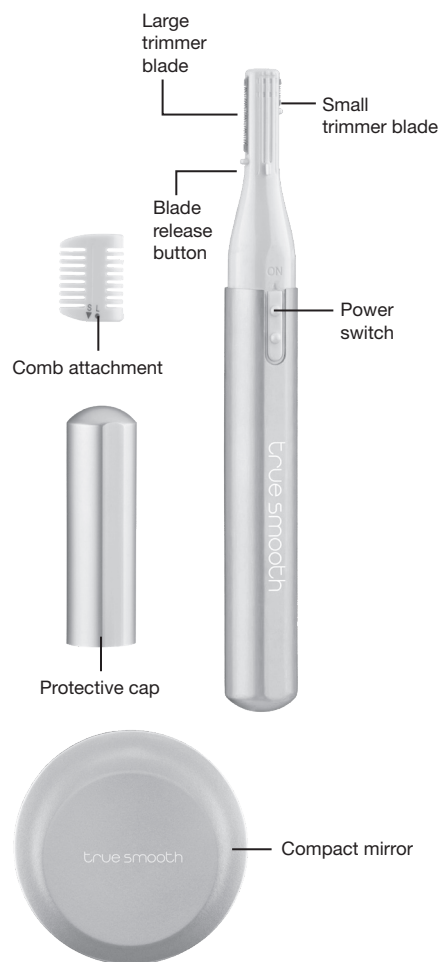

### OPERATING INSTRUCTIONS Before Use

Prior to initial use, test trimmer on small area of arm or leg. If any signs of allergic reaction or sensitivity occur, discontinue use. Do not use trimmer on ultra-sensitive or irritated skin. Keep out of reach of children.

 
#### To Operate Trimmer

This trimmer comes with two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller blade is ideal for detailing.


It also comes with a comb attachment that helps you achieve

an even cut when you do not want to completely remove the hair. The comb attachment has two sides: The long tooth is for body hair and the short tooth is for eyebrow trimming. Aligning the indicator with the L mark on the comb leaves hair longer, while aligning with S mark leaves hair shorter.


To use the comb attachment, be sure the unit is in the off position and slide the comb over the trimming blades. Make sure that the teeth of the comb are facing in the same direction as the trimming blade, and that the top of the comb is even with the top of the trimmer (see Fig. 1).

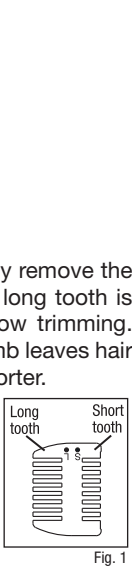

If you want to completely remove hair, use the trimmer without the comb attachment. To operate the trimmer, slide the on switch toward the trimming blades. When you are finished trimming, slide the on switch away from the blades. To store the trimmer, slide the comb attachment cover over the trimming blades. Be sure to align triangle sign on the comb attachment with indicator on the trimmer housing (see Fig. 2).

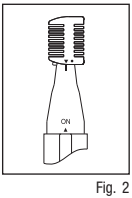 

 Then slide the protective cap over the comb attachment so that the triangle sign on protective cap aligns with the triangle sign on the handle tube (see Fig. 3).

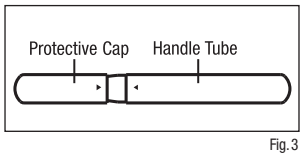

### TRIMMING TIPS

1. Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure on the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

### REPLACING THE BATTERY

To replace battery, remove the lower housing and remove/replace battery and reassemble to cover housing. Dispose of battery properly after use. Do not incinerate.

1. Be sure appliance is off, remove the protective cap and then hold the upper part of the trimmer firmly and pull off battery cover.
2. Insert 1 AAA battery. Pay close attention, making sure that the battery is inserted in the correct direction (+ / - poles). If you expect that the trimmer will go unused for some time, please remove the battery.
3. Slide the on/off switch into the notch in the battery cover when closing the trimmer.
4. Clean the battery contacts and also those of the device

5. prior to battery installation.
5. Remove used batteries promptly.
6. Use only alkaline batteries.

**Do not use in the shower or submerge unit in water.**

**For best performance, AAA alkaline batteries are recommended.**

### CARE AND MAINTENANCE

Do not use water to clean, and do not use the trimmer in a damp room. Do not use harsh cleaning products. Instead, use mild cleaning agents to care for the trimmer.

1. Make sure the trimmer is in the off position.
2. To remove the blade, press the blade release button away from the trimmer blade.
3. Carefully remove the blade from the trimmer.
4. Use a small brush to wipe away any hair or dust. Never remove foreign matter with a sharp object.
5. After cleaning, replace the blade. Make sure unit is still in the off position when replacing blade. Cover blade with protective cap for storage.

### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.



Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



The above symbol means "Not to be used in bath or shower"

1. Use this appliance only for its intended use as described within this instruction booklet.
2. Never immerse the unit in water or any other liquid.
3. Do not use the unit if it has fallen or if it appears to be damaged.
4. Do not use any accessories other than those recommended by manufacturer.
5. If the foil or teeth is cracked, broken or loose, do not use it again and replace with a new foil.using a foil in a faulty condition can cause injury.
6. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

7. Do not leave the unit unattended when switched on.
8. Please stop using it immediately and remove batteries if you have problems when using it.
9. Switch off the unit after each use and before cleaning it.
10. Allow the unit to cool before storing.
11. Do not place the appliance on any surface whilst in operation.
12. This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.

### SAFE DISPOSAL

When the batteries have run down, they should be disposed of at a recycling centre to safeguard the environment. If the batteries leak avoid touching them and dispose of them at a recycling centre.

Never dispose of batteries in fire, except under condition of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries, as this may cause leakage, fire, or explosion.

### ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. To obtain this warranty service, please keep the original purchase receipt. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice.

### OUT OF GUARANTEE

Call Conair Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email\_asia@conair.com with your name, contact telephone number and email address and details of the fault.

### CONAIR CUSTOMER SERVICE:

35/F., Standard Chartered Tower, Millennium City,  
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong  
Conair Customer Hotline: (852) 2751 4604  
E-mail: email\_asia@conair.com  
Website: www.hkconair.com