

HANDHELD FABRIC STEAMER



INSTRUCTION
BOOKLET

CONAIR®

CGS22WH

CONAIR HANDHELD FABRIC STEAMER

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



The above symbol means " Do not use this device in a bathtub, shower or water-filled reservoir "

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before filling or cleaning it.
9. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
10. Allow the unit to cool before storing.
11. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
12. When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly.

To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.


13. Do not steam garments while on a person.
14. Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
15. Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. We recommend the use of distilled or purified cold water only.
16. Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
17. Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
18. Use with caution when carrying steamer as it contains hot water.

NOTE: When first using the device, it is recommended to test on an old cloth or operate the steamer for 5 minutes , as there may be sediment left from the manufacturing process or transportation. Then unplug the unit and allow it to cool. Empty container and refill before actually using.

HOUSEHOLD USE ONLY

FILLING INSTRUCTIONS

1. Make sure the unit is unplugged.
2. Stand the unit on a table and grasp with one hand.
3. With other hand, pull the reservoir out, away from the steamer body.
4. Open the inlet cover and fill the reservoir with distilled water (which can be found in grocery stores). We recommend that you use distilled water only as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
5. Close the inlet cover and return the reservoir to its place, making sure that it snaps in place and is secure.

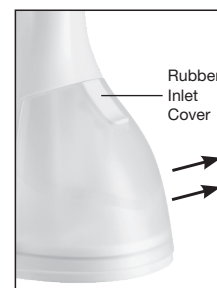

CGS22WH

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	3/29/22
Customer	CKTL
Model No.	CGS22WH
Description	IB
Job No.	
Reference No.	IB-22/040
Revision No.	9
Color	1C+1C(Black)
Open Size	368mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong/ Phoebe Laung
Vendor	YUELI
Supplier	

折疊方法
Folding method:
8 pages (4 x 2)



IB-22/040

GET TO KNOW YOUR STEAMER



OPERATING THE STEAMER

1. Fill water reservoir with preferably distilled water (See Filling Instructions.) Make sure the unit is unplugged.
2. Plug the unit into the electrical outlet, press **ⓘ** power button on.
3. The power light will light up (red). Allow around 45 seconds for the unit to warm up. The appliance is ready to use when the ready light goes on (green). **NOTE:** Before first use or when the unit has not been used for a long period of time, it will be necessary to prime (i.e., fill with water) the internal tank while the steamer prepares to steam. You may hear a small tapping noise during the heat-up process; this is normal.
4. Holding the steam jets away from you and anyone else in the room, engage the trigger. Steam should now be released from the steam jets. To have continuous steam, just move switch on trigger lower so you will have continuous steam without having to hold the trigger. Always have steam facing away from you or anyone in the room.
5. To stop the flow of steam, release the trigger or upward the switch.
6. Press power button to turn unit off. Unplug the device when it is not in use.

STEAMING TIPS

CAUTION: First, test unit on an inconspicuous area of the item to be steamed, using the regular Steam setting to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.

1. Prepare your fabric for steaming and hang your garment or fabric. **NOTE:** Avoid using metal clothes hangers, if possible.
2. Hold fabric taut with one hand and hold steamer with the other hand. Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely. **CAUTION: If hanging garment on a door while steaming, be careful not to damage the door with steam.**
3. For heavier fabrics or severely wrinkled fabrics, you may position the steamer head directly on the fabric for a few seconds to remove wrinkles. Be cautious when working with delicate fabrics. **NOTE:** Do not continuously hold steamer over an area or touch steamer jets directly to fabric for more than a few seconds, as this can cause damage, including shrinkage, melting, or color shift on certain types of material.
4. After use, turn unit off by depressing the power button. Empty any remaining water from the tank to avoid leakage. With dry hands, unplug your garment steamer from the outlet. **BE SURE TO PRESS THE POWER BUTTON PRIOR TO UNPLUGGING THE UNIT**

CLEANING/STORING/MAINTENANCE

- After use – wait for it to cool down before cleaning and then remove any water left in water tank.
- Allow the water tank to dry thoroughly.
- Keep this garment steamer out of reach of babies and children.
- Do not wrap the power cord around the unit and ensure it is stored without twisting or folding it.
- For the best performance, limescale should be removed from time to time.

CLEAN THE SURFACE

Make the appliance cool down, wipe its surface with a piece of damp cloth dipped with mild detergent and then wipe it well.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the Conair Garment Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your water and how often you use the steamer. To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water reservoir.

Plug the unit into electrical outlet. Wait the ready light goes on then activate the steam trigger, and run until all amount has steamed. Release the steam trigger, unplug from electrical outlet, and allow to sit for 30 minutes.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2 to 3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification before using the unit again to steam garments.

Note: Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.

WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW = EARTH
BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N' .
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L' .
- The wire which is coloured GREEN & YELLOW must be connected to the terminal which is marked with the letter "E" or the \oplus symbol.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter 'E' or the \oplus symbol.

With this appliance, if a 13 amp plug is used a 13 amp fuse should be fitted. If any other type of plug is used a 13 amp fuse must be fitted either in the plug or at the distribution board.

ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. To obtain this warranty service, please keep the original purchase receipt. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice.

OUT OF GUARANTEE

Call Conair Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email_asia@conair.com with your name, contact telephone number and email address and details of the fault.

CONAIR CUSTOMER SERVICE:

35/F., Standard Chartered Tower, Millennium City,
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong
Conair Customer Hotline: (852) 2751 4604
E-mail: email_asia@conair.com
Website: www.hkconair.com

For more information, please visit



Before use, please obtain digital instruction manual by QR code to avoid losing paper manual and failing to obtain product information.